

ation, Lubrication are

ng machine, read this page carefully.

g the motor, be sure that electric supply voltage
e the same as stamped on the nameplate.
sh in turning knob and turn the machine over
ns by hand to see if the knife moves easily.

This machine is equipped with a sharp
knife. Keep hands away from the knife
area at all times. Use control levers and
handles only when operating or handling
machine.


OF MACHINE

bellows with proper eye shields and blow lint out
arpener twice a week. Remove cover over cam and
around screw mechanism in sharpener once a
knife and clean slides with slot cleaner at least once
ent undue accumulation of lint, do not oil plate
s stick, remove from plate and wash in cleaning

Do not operate sharpener without knife
in machine or the sharpener will be
damaged.

OPEN THE KNIFE

ine out of the lay. Drop pressure foot by means
not lever located next to machine operating
lease lever downward with a slow, firm pressure
ening emchanism. Too fast lever action may cause

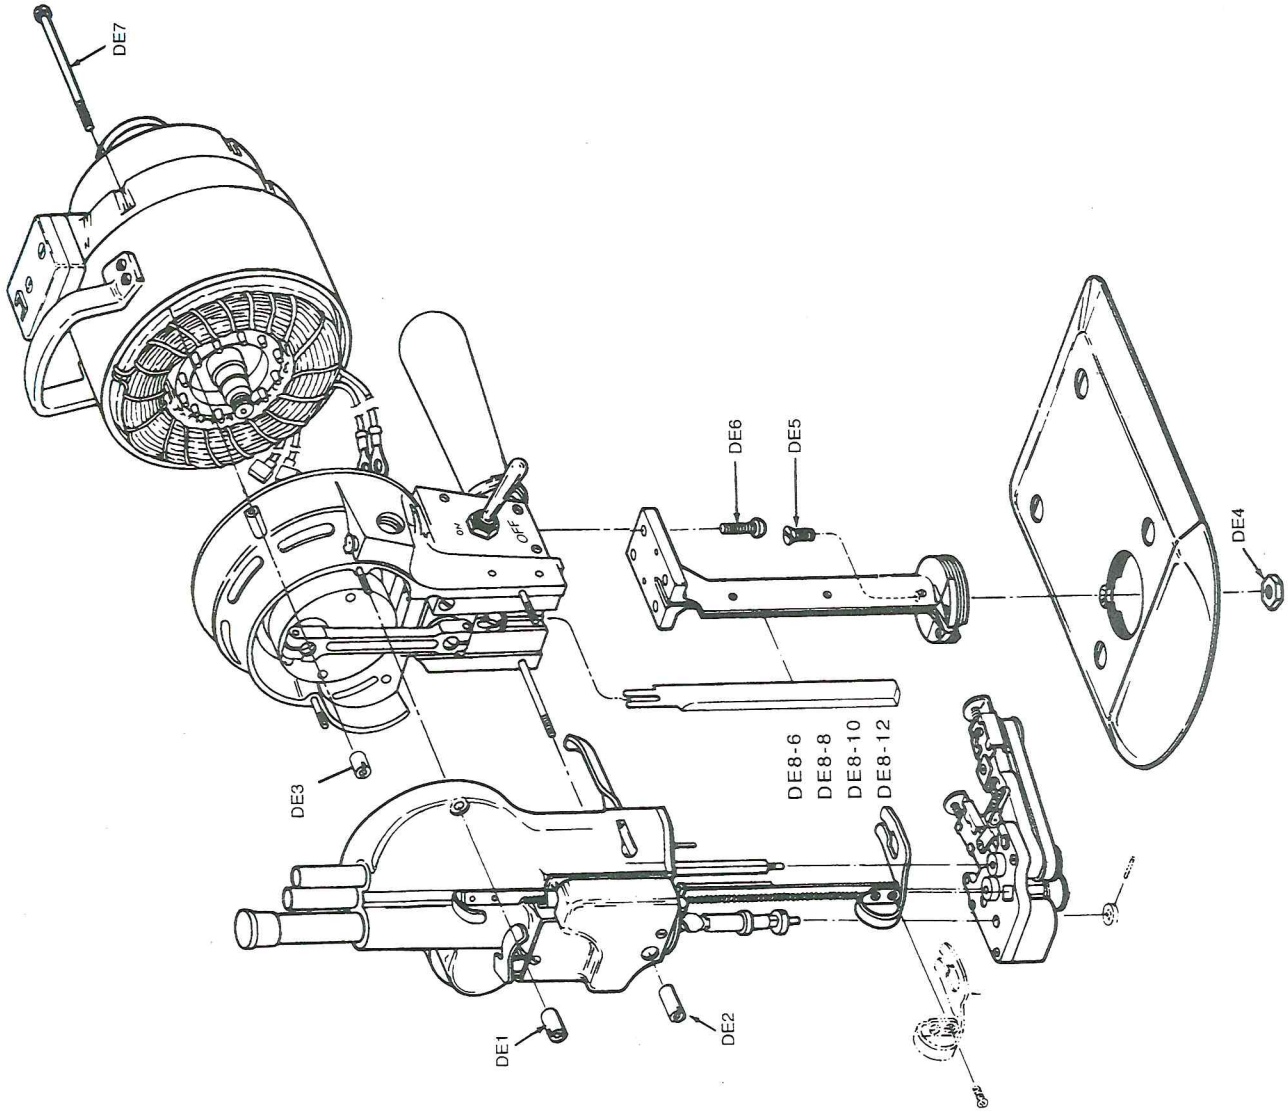

Part NO.	Description	No. Req'd
DE1	Sharpener Hold-Down Nut	3
DE2	Sharpener Hold-Down Nut	1
DE3	Front-to-Rear Bearing Nut	4
DE4	Plate Bolt Nut	1
DE5	Standard-to-Rear Bearing Screw	1