

# Assembly

Part NO	Description	No. Req'd
DE196	L.H. Shaft Extension <sup>8</sup>	1
DE197	RH Shaft Extension	1
DE198	Adjusting Screw	1
DE199	Screw	1
DE200	Screw	3
DE201	Gear Cover	1
DE202	Screw	2
DE203	Guide Back of Standard	1
DE204	Spring for Arm	1
DE205	Clamping Arm for Shoe	1
DE206	Screw for Clamping Arm	1
DE207	Screw	4
DE208	Stabilizer	2
DE209	Nut for Sharpener Shoe Screw	2
DE210	Screw #4-36x3/16 Fillister Head	2
DE211	Intermediate Gear	1
DE212	Lower Gear Bracket with Cover	1
DE213	Wear Plate	2
DE214	Spring for Pulleyslide	2
DE215	R.H. Slide with Pulley	1
DE216	Slide with Pulley	1
DE217	Gear on Screw Shaft <sup>24</sup>	1
DE218	Grease Plug	1
DE219	Bearing for Screw Shaft	1
DE220	Bearing for Intermediate Gear	1
DE221	Bearing for shaft Extension	2
DE222	Front Pulley for Belt	1
DE223	Roll Pin	2
DE224	Neoprene Band for Pulley	2
DE225	R.H. Pre-set Sharpener Shoe(Only)	1
DE226	L.H. Pre-set Sharpener Shoe(Only)	1
DE227	Washer	4
DE228	R.H. Pre-set Sharpener Shoe	1
DE229	L.H. Pre-set Sharpener Shoe	1
DE230	Bushing for sharpener Shoe	2
DE231	R.H. Sharpener Shoe Spring	1
DE232	L.H. Sharpener Shoe Spring	1
DE233	Screw for Sharpener shoe	2
DE234	Shim Screw	1
DE235	Jam Nut	1

